


Belt Punching for "Continuous Discharge" Elevator Buckets

(P Patterns) -- Page 1 of 1

Styles HF, HFO, MF & LF

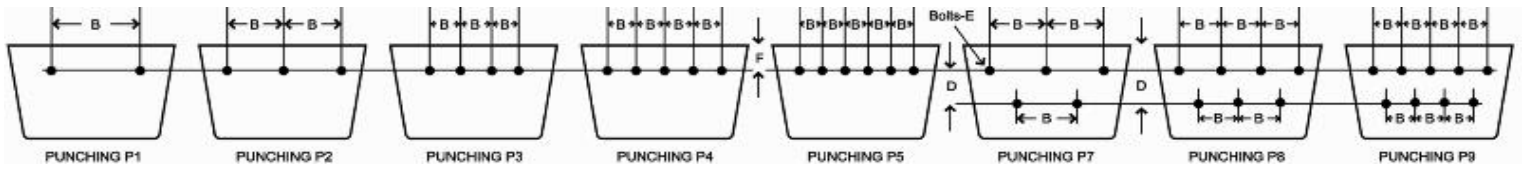

Nominal Bucket Size (inches)	Punching	Belt Width (inches)	B	D	E	F
			Inches			
8x5x7-3/4	P7	9-10	3	1	1/4	3-3/8
8x5x8-1/2	P7	9-10	3	1	1/4	3-3/4
9x6x9-1/4	P7	10	3	1	1/4	4-1/8
10x5x7-3/4	P7	11-12	3-1/2	1	5/16	3-3/8
10x5x8-1/2	P7	11-12	3-1/2	1	5/16	3-3/4
10x6x9-1/4	P7	11-12	3-1/2	1	5/16	4-1/8
10x6x10	P7	11-12	3-1/2	1	5/16	4-1/2
10x7x11-5/8	P7	11-12	3-1/2	1	5/16	5-5/16
10x7x12-1/2	P7	11-12	3-1/2	1	5/16	5-3/4
10x8x11-5/8	P7	11-12	3-1/2	1	5/16	5-5/16
11x6x9-1/4	P7	12	4	1	5/16	4-1/8
12x5x7-3/4	P7	13-14	4-1/2	1	5/16	3-3/8
12x6x9-1/4	P7	13-14	4-1/2	1	5/16	4-1/8
12x6x10	P7	13-14	4-1/2	1	5/16	4-1/2
12x7x11-5/8	P7	13-14	4-1/2	1	5/16	5-5/16
12x7x11-3/4	P7	13-14	4-1/2	1	5/16	5-3/8
12x7x12-1/2	P7	13-14	4-1/2	1	5/16	5-3/4
12x8x11-5/8	P7	13-14	4-1/2	1	5/16	5-5/16
12x8x12-1/2	P7	13-14	4-1/2	1	5/16	5-3/4
14x7x11-5/8	P8	15-16	4	1	5/16	5-5/16
14x7x12-1/2	P8	15-16	4	1	5/16	5-3/4
14x8x11-5/8	P8	15-16	4	1	5/16	5-5/16
14x8x11-3/4	P8	15-16	4	1	5/16	5-3/8
14x8x12-1/2	P8	15-16	4	1	5/16	5-3/4
16x7x11-3/4	P8	18	4-1/2	1	5/16	5-3/8
16x8x11-5/8	P8	18	4-1/2	1	5/16	5-5/16
16x8x12-1/2	P8	18	4-1/2	1	5/16	5-3/4
16x12x17-5/8	P8	18	4-1/2	1	5/16	8-5/16
16x12x18-5/8	P8	18	4-1/2	1	5/16	8-13/16
18x8x11-5/8	P8	20	5	1	5/16	5-5/16
18x10x15	P8	20	5	1	5/16	7
20x8x11-5/8	P9	22	4	1	5/16	5-5/16
20x12x17-5/8	P9	22	4	1	5/16	8-5/16
20x12x18-5/8	P9	22	4	1	5/16	8-13/16
24x10x11-5/8	P9	26	5	1	5/16	5-5/16
24x12x17-5/8	P9	26	5	1	5/16	8-5/16
24x12x18-5/8	P9	26	5	1	5/16	8-13/16

Consult a T.O.P.S. Inc. staff member for dimension certification.

Need a distributor in your area? Please contact T.O.P.S. Inc. at 877-326-4704!!



2641 Metro Blvd. Maryland Heights, MO 63043
(Phone) 636-326-4700 (Fax) 314-395-8671 (Online) www.topsinc.us